

#26084

### Korbhalterung

Die Korbhalterung kann am TRIGO und TRET nachgerüstet werden.

Systemadapter mit dem quick fastener System von AtranVelo, Basil MIK und Rixen & Kaul können direkt auf das Korbhalteblech (1) montiert werden. Für alle anderen Systemadapter, Boxen oder Kupplungssysteme müssen eventuell Bohrungen in dem Korbhalteblech (1) erstellt werden.

### Montage des Korbhalters

1. Platzieren Sie das Korbhalteblech (1) mit den Abstandshaltern (2) auf dem Extrusionsprofil (3). Ziehen Sie die drei M6 Schrauben (4) mit einem Drehmoment von 9Nm an.

2. Führen Sie den Korbhalter in das hintere Rahmenrohr ein.

3. Legen Sie eine Vierkantsmutter (5) in die Nut des hinteren Rahmenrohres (6) und positionieren Sie die Vierkantsmutter gegenüber der Bohrung.


4. Positionieren Sie den Korbhalter im geeigneten Abstand zum Sitz. Dies kann je nach Größeneinstellung für den Fahrer variieren.

5. Fixieren Sie den Korbhalter mit einer M8 Schraube (7).

**i Hinweis:** Körbe die kein quick fastener System haben müssen auf den Korbhalter angeschraubt werden.

**i Hinweis:** Beachten Sie bei Verwendung der Korbhalterung an dem TRET die geringere Bodenfreiheit.

**! Achtung:** Die Bodenfreiheit kann im Anhängerbetrieb geringer sein.

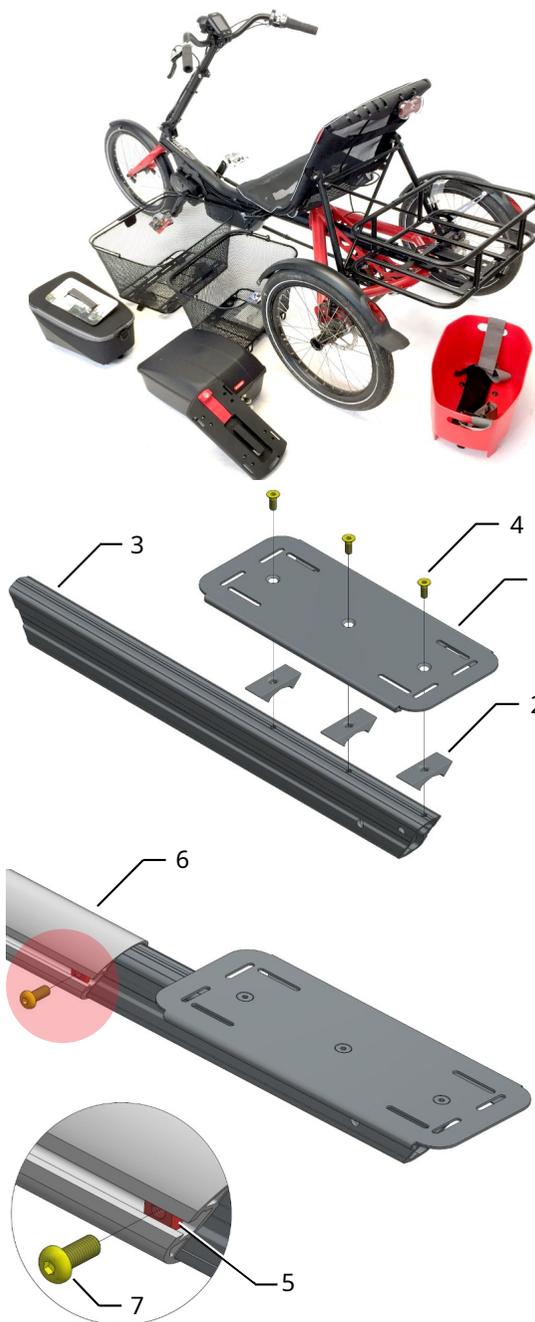

### Basket Mount

The basket mount can be retrofitted to the TRIGO and TRET.

System adapters with the quick fastener system from AtranVelo, Basil MIK and Rixen & Kaul can be mounted directly on the basket retaining plate (1). For all other system adapters, boxes or coupling systems, holes may have to be made in the basket retaining plate (1).

### Installation of the Basket Mount

1. Place the basket retaining plate (1) with the spacers (2) on the extrusion profile (3). Tighten the three M6 bolts (4) with a torque of 9Nm.

2. Slide the basket mount into the rear frame tube.

3. Place a square nut (5) in the groove of the rear frame tube and position it so that the opening in the nut is lined up with the hole in the frame tube (6).

4. Position the basket mount at an appropriate distance from the seat. This can vary depending on the size setting used for the rider.

5. Secure the basket mount using an M8 bolt (7).

**i Note:** Baskets without the Snap-it system must be bolted to the basket mount.

**i Note:** When using the basket on the TRET, note the reduced ground clearance.

**! Caution:** The ground clearance may be lower in trailer operation.