

Montage:


1. Entfernen Sie die Schraube (1) mit der Unterlegscheibe am Sitzgestell.
Hinweis: Entfernen Sie dazu rückseitig die Sicherungsmutter.
2. Positionieren Sie die Armablage mit der Halterung wie abgebildet.
3. Befestigen Sie die Halterung oben mit Schraube (2) und den beiden Abstandshülsen (3), sowie unten mit Schraube (4) und 3x Unterlegscheibe (5).
4. Befestigen Sie die Schrauben rückseitig jeweils mit einer Sicherungsmutter (6) und einer Unterlegscheibe.

Achtung! Die zulässige Belastung der Armlehne von 10kg darf nicht überschritten werden.


Assembly

1. Remove the screw (1) with the washer from the seat frame.
Note: To do this, remove the locking nut on the back.
2. Position the armrest with the mounting bracket as shown.
3. Fasten the mounting bracket at the top with screw (2) and the two spacer sleeves (3), and at the bottom with screw (4) and 3x washer (5).
4. Fasten the screws at the back with a lock nut (6) and a washer.

Caution! The permissible load on the armrest of 10 kg must not be exceeded.

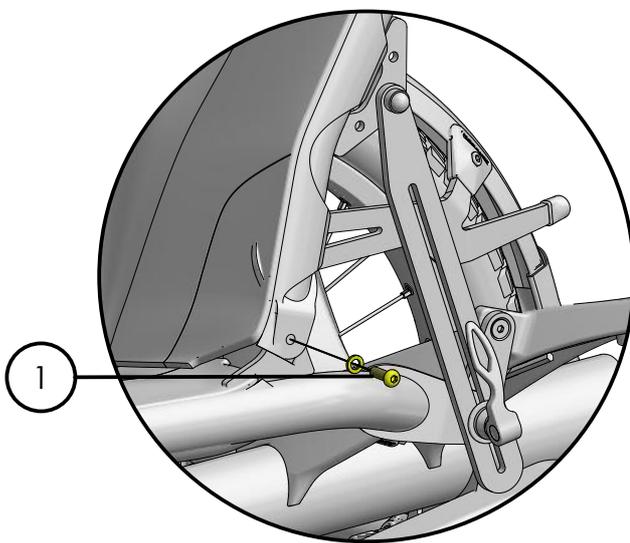

A

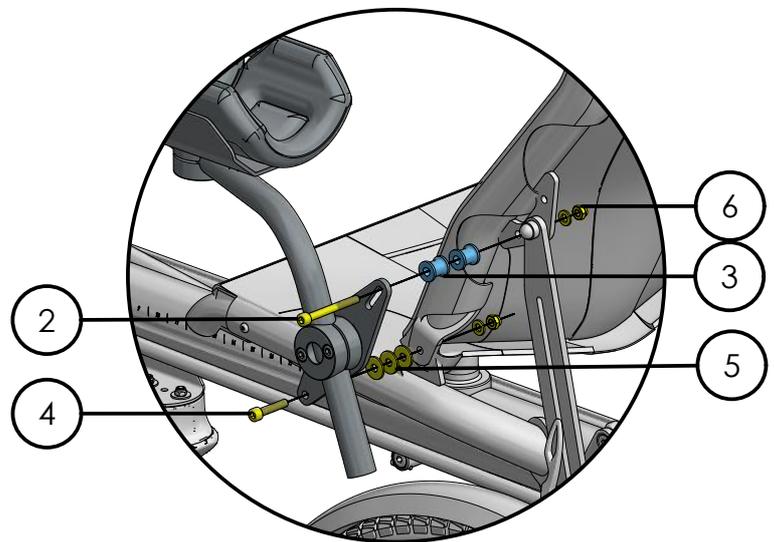

B

